

Power Supply Profile

Document Number: DCIM1001
Document Type: Specification
Document Status: Published
Document Language: E
Date: 2008-11-10

Version: 1.0.0a



THIS PROFILE IS FOR INFORMATIONAL PURPOSES ONLY, AND MAY CONTAIN TYPOGRAPHICAL ERRORS AND TECHNICAL INACCURACIES. THE CONTENT IS PROVIDED AS IS, WITHOUT EXPRESS OR IMPLIED WARRANTIES OF ANY KIND. ABSENT A SEPERATE AGREEMENT BETWEEN YOU AND DELL™ WITH REGARD TO FEEDBACK TO DELL ON THIS PROFILE SPECIFICATION, YOU AGREE ANY FEEDBACK YOU PROVIDE TO DELL REGARDING THIS PROFILE SPECIFICATION WILL BE OWNED AND CAN BE FREELY USED BY DELL.

© 2008 Dell Inc. All rights reserved. Reproduction in any manner whatsoever without the express written permission of Dell, Inc. is strictly forbidden. For more information, contact Dell.

Dell and the *DELL* logo are trademarks of Dell Inc. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell disclaims proprietary interest in the marks and names of others.

CONTENTS

Foreword	6
Introduction	7
1 Scope	9
2 Normative References.....	9
2.1 Approved References	9
2.2 Other References.....	9
3 Terms and Definitions	9
4 Symbols and Abbreviated Terms.....	11
5 Synopsis.....	11
6 Description	11
6.1 Power Supply Redundancy	12
6.2 Power Measurements	12
7 Implementation Requirements	13
7.1 CIM_PowerSupply	13
7.2 CIM_EnabledLogicalElementCapabilities.....	13
7.3 Power Supply State Management (Optional)	13
7.4 CIM_PowerSupply.RequestedState	14
7.5 CIM_PowerSupply.EnabledState	14
7.6 CIM_SystemDevice and CIM_SuppliesPower	14
7.7 Modeling Power Supply Redundancy (Optional).....	15
7.8 CIM_PowerSupply.ElementName	15
7.9 Modeling Real-time Power Measurement Sensor (Optional)	16
7.10 Power Supply Profile Metrics (Optional).....	17
8 Methods.....	17
8.1 Method: CIM_PowerSupply.RequestStateChange()	18
8.2 Method: CIM_RedundancySet.Failover()	19
8.3 Profile Conventions for Operations.....	20
8.4 CIM_ElementCapabilities Operations.....	20
8.5 CIM_EnabledLogicalElementCapabilities Operations	21
8.6 CIM_IsSpare Operations	21
8.7 CIM_MemberOfCollection Operations.....	21
8.8 CIM_OwningCollectionElement Operations	21
8.9 CIM_PowerSupply Operations	22
8.10 CIM_RedundancySet Operations	22
8.11 CIM_SuppliesPower Operations.....	22
8.12 CIM_SystemDevice Operations.....	23
9 Use Cases.....	23
9.1 Object Diagrams	23
9.2 Power Sensor Information	26
9.3 Power Metrics	26
9.4 Retrieve the Power Supply's Power Output Information	27
9.5 Reset the Power Supply	27
9.6 Retrieve the Power Supply Redundancy Status.....	28
9.7 Find the Elements to Which the Power Supply Supplies Power	28
9.8 Determine Whether the CIM_PowerSupply.ElementName Is Modifiable	28
10 CIM Elements.....	28
10.1 CIM_BaseMetricDefinition	29
10.2 CIM_ElementCapabilities	29
10.3 CIM_EnabledLogicalElementCapabilities.....	30
10.4 CIM_IsSpare	30
10.5 CIM_MemberOfCollection	30
10.6 CIM_NumericSensor – Power Consumption Measurement Sensor	30
10.7 CIM_NumericSensor – Power Production Measurement Sensor	31

Power Supply Profile

10.8	CIM_PowerSupply	31
10.9	CIM_RedundancySet.....	31
10.10	CIM_RegisteredProfile.....	32
10.11	CIM_Sensor – Power Consumption Measurement Sensor.....	32
10.12	CIM_Sensor – Power Production Measurement Sensor.....	32
10.13	CIM_SystemDevice	32
10.14	CIM_OwningCollectionElement.....	33
10.15	CIM_SuppliesPower	33
ANNEX A (informative)	Change Log.....	34
ANNEX B (informative)	Acknowledgments.....	35

Figures

Figure 1 – Power Supply Profile: Class Diagram.....	12
Figure 2 – Power Supply Profile: Object Diagram	24
Figure 3 – Power Supply Profile: Redundancy Object Diagram	25
Figure 4 – Power Supply Profile: Dedicated Power Supply.....	25
Figure 5 – Power Supply Profile: Power Sensors.....	26
Figure 6 – Power Supply Profile: Power Metrics	27

Tables

Table 1 – Related Profiles.....	11
Table 2 – EnabledState Value Description	14
Table 3 – Power Supply Profile Metrics – Dell Specific.....	17
Table 4 – CIM_PowerSupply.RequestStateChange() Method: Return Code Values.....	18
Table 5 – CIM_PowerSupply.RequestStateChange() Method: Parameters	18
Table 6 – CIM_RedundancySet.Failover() Method: Return Code Values.....	19
Table 7 – CIM_RedundancySet.Failover() Method: Parameters.....	20
Table 8 – CIM_ElementCapabilities Operations	20
Table 9 – CIM_IsSpare Operations	21
Table 10 – CIM_MemberOfCollection Operations	21
Table 11 – CIM_OwningCollectionElement Operations	21
Table 12 – CIM_PowerSupply Operations.....	22
Table 13 – CIM_SuppliesPower Operations.....	22
Table 14 – CIM_SystemDevice Operations.....	23
Table 15 – CIM Elements: Power Supply Profile	29
Table 16 – Class: CIM_BaseMetricDefinition	29
Table 17 – CIM_ElementCapabilities.....	29
Table 18 – CIM_EnabledLogicalElementCapabilities.....	30
Table 19 – Class: CIM_IsSpare	30
Table 20 – Class: CIM_MemberOfCollection.....	30
Table 21 – Class: CIM_NumericSensor.....	31
Table 22 – Class: CIM_NumericSensor.....	31
Table 23 – Class: CIM_PowerSupply	31
Table 24 – Class: CIM_RedundancySet.....	31
Table 25 – Class: CIM_RegisteredProfile.....	32
Table 26 – Class: CIM_Sensor	32
Table 27 – Class: CIM_Sensor	32
Table 28 – Class: CIM_SystemDevice	32
Table 29 – Class: CIM_OwningCollectionElement	33
Table 30 – Class: CIM_SuppliesPower	33

Foreword

The Power Supply Profile (DCIM1001) was prepared by the Dell CIM Review Board.

Introduction

This specification identifies the necessary classes, properties, methods, and values to be instantiated and manipulated to represent and manage power supply modeled using the DMTF Common Information Model (CIM) core and extended model definitions.

This document is intended for implementers who write CIM-based providers or consumers of management interfaces representing the component described herein.

Power Supply Profile

1 Scope

The Power Supply Profile extends the management capabilities of referencing profiles by adding the capability to represent power supplies for manageability and describe power supplies in a redundant configuration. The power supply as a logical device is modeled as referencing the power supply physical package for physical asset information and profile versioning for the schema implementation version information.

2 Normative References

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

2.1 Approved References

DMTF DSP1033, *Profile Registration Profile 1.0.0*

DMTF DSP1011, *Physical Asset Profile 1.0.0*

DMTF DSP1009, *Sensors Profile 1.0.0*

DMTF DSP1053, *Base Metrics Profile 1.0.0*

DMTF DSP1015, *Power Supply Profile 1.0.0*

DMTF DSP0200, *CIM Operations over HTTP 1.2.0*

DMTF DSP0004, *CIM Infrastructure Specification 2.3.0*

DMTF DSP1000, *Management Profile Specification Template*

DMTF DSP1001, *Management Profile Specification Usage Guide*

2.2 Other References

ISO/IEC Directives, Part 2, *Rules for the structure and drafting of International Standards*, <http://isotc.iso.org/livelink/livelink.exe?func=ll&objId=4230456&objAction=browse&sort=subtype>

Unified Modeling Language (UML) from the Open Management Group (OMG), <http://www.uml.org>

SM Managed Element Addressing Specification (SM ME Addressing) DSP0215, <http://www.dmtf.org/spec>

3 Terms and Definitions

For the purposes of this document, the following terms and definitions apply.

3.1

can

used for statements of possibility and capability, whether material, physical, or causal

3.2

cannot

used for statements of possibility and capability, whether material, physical, or causal

3.3

conditional

indicates requirements to be followed strictly in order to conform to the document when the specified conditions are met

3.4

mandatory

indicates requirements to be followed strictly in order to conform to the document and from which no deviation is permitted

3.5

may

indicates a course of action permissible within the limits of the document

3.6

need not

indicates a course of action permissible within the limits of the document

3.7

optional

indicates a course of action permissible within the limits of the document

3.8

referencing profile

indicates a profile that owns the definition of this class and can include a reference to this profile in its "Related Profiles" table

3.9

shall

indicates requirements to be followed strictly in order to conform to the document and from which no deviation is permitted

3.10

shall not

indicates requirements to be followed strictly in order to conform to the document and from which no deviation is permitted

3.11

should

indicates that among several possibilities, one is recommended as particularly suitable, without mentioning or excluding others, or that a certain course of action is preferred but not necessarily required

3.12

should not

indicates that a certain possibility or course of action is deprecated but not prohibited

3.13

Spare Power Supply

indicates an instance of CIM_PowerSupply that represents a spare power supply in any condition

4 Symbols and Abbreviated Terms

4.1

CIM

Common Information Model

5 Synopsis

Profile Name: Power Supply Profile

Version: 1.0.0

Organization: Dell

CIM Schema Version: 2.15.0

Central Class: CIM_PowerSupply

Scoping Class: CIM_ComputerSystem

The Power Supply Profile extends the management capability of the referencing profiles by adding the capability to describe power supplies and redundant power supplies.

Table 1 identifies profiles that are related to this profile.

Table 1 – Related Profiles

Profile Name	Organization	Version	Relationship
Power Supply Profile	DMTF	1.0	Specializes
Physical Asset Profile	DMTF	1.0	Optional
Sensors Profile	DMTF	1.0	Optional
Base Metrics Profile	DMTF	1.0	Optional
Profile Registration Profile	DMTF	1.0	Mandatory

6 Description

The Power Supply Profile describes power supplies and power supply redundancies in a managed system. The profile also describes the relationship of the power supply class to the power supply's physical aspects, such as FRU data, and DMTF profile version information.

Figure 1 represents the class schema for the Power Supply Profile. For simplicity, the prefix CIM_ has been removed from the names of the classes.

The power supply in a managed system is represented by the instance of CIM_PowerSupply. The capability to disable and enable the power supply is advertised through the CIM_EnabledLogicalElementCapabilities instance.

The managed elements that receive power from the power supply are associated to the instance of CIM_PowerSupply through an instance of CIM_SuppliesPower. When the CIM_PowerSupply instance is not referenced by the CIM_SuppliesPower association, the power supply represented by the

Power Supply Profile

CIM_PowerSupply instance supplies power to the managed system that is scoped through the CIM_SystemDevice association.

The power supply's physical aspects can be represented by one or more instances of CIM_PhysicalPackage.

The profile information is represented with the instance of CIM_RegisteredProfile.

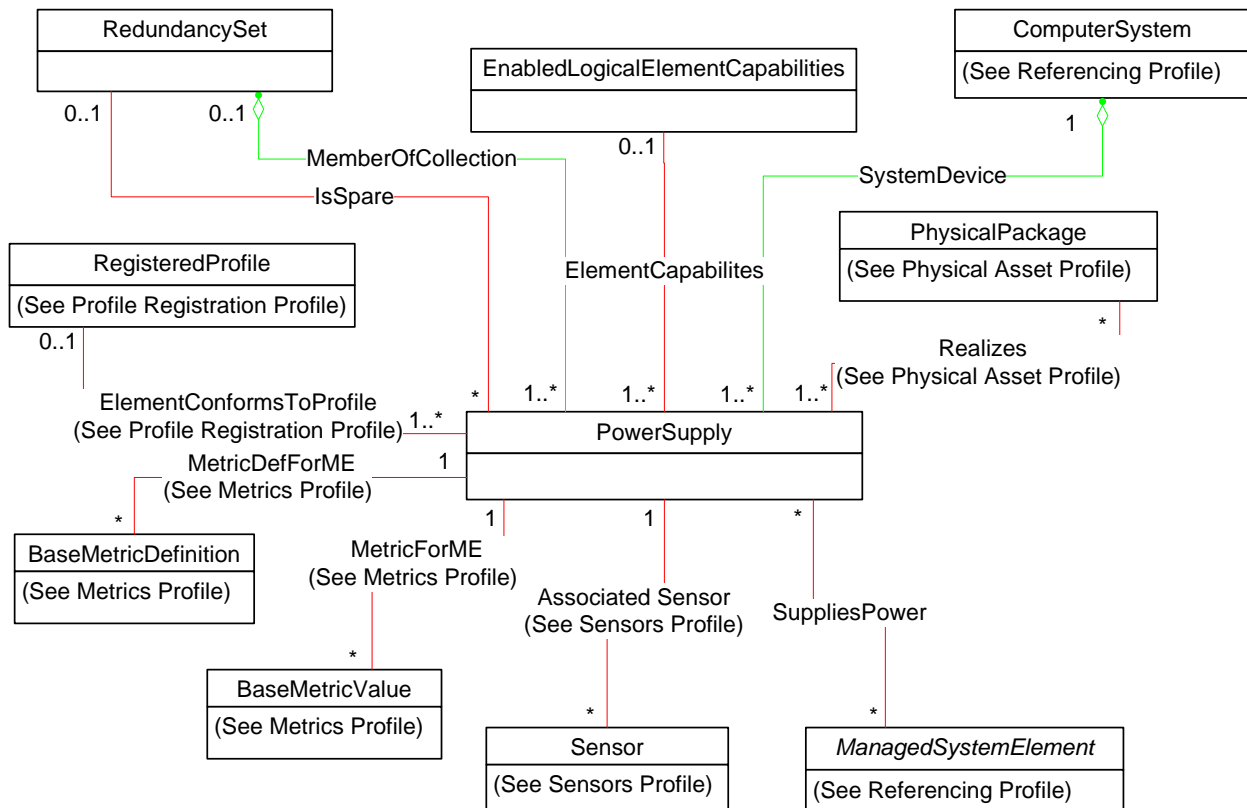


Figure 1 – Power Supply Profile: Class Diagram

6.1 Power Supply Redundancy

The redundancy of power supplies in a managed system is represented through an instance of CIM_RedundancySet. Each of the instances of CIM_PowerSupply that corresponds to a redundant power supply is associated to the instance of CIM_RedundancySet through an instance of CIM_MemberOfCollection. The Spare Power Supplies within the redundancy are also associated with the CIM_RedundancySet instance through an instance of CIM_IsSpare.

6.2 Power Measurements

The instrumentation can expose various power measurements within a managed system. Real-time power consumption by managed elements and real-time power production by power supplies are represented through instances of CIM_Sensor from Sensors Profile. Various metrics on power consumption and production, such as high/low watermarks or historical averages are represented by instance of CIM_BaseMetricDefinition and CIM_BaseMetricValue from the Base Metrics Profile.

7 Implementation Requirements

Requirements and guidelines for propagating and formulating certain properties of the classes are discussed in this section. Methods are listed in section 8 and properties are listed in section 10.

7.1 CIM_PowerSupply

At least one instance of CIM_PowerSupply shall be instantiated.

7.2 CIM_EnabledLogicalElementCapabilities

When the CIM_EnabledLogicalElementCapabilities class is instantiated, the instance of CIM_EnabledLogicalElementCapabilities shall be associated with the CIM_PowerSupply instance through an instance of CIM_ElementCapabilities and used for advertising the capabilities of the CIM_PowerSupply instance.

There shall be at most one instance of CIM_EnabledLogicalElementCapabilities associated with a given instance of CIM_PowerSupply.

7.2.1 CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported

CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported is an array that contains the supported requested states for the instance of CIM_PowerSupply. This property shall be the super set of the values used as the RequestedState parameter in the RequestStateChange() method (see section 8.1). The value of the CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported property shall be an empty array or contain any combination of the following values: 2 (Enabled), 3 (Disabled), 6 (Offline), or 11 (Reset).

7.2.2 CIM_EnabledLogicalElementCapabilities.ElementNameEditSupported

This property shall have a value of TRUE when the implementation supports client modification of the CIM_PowerSupply.ElementName property.

7.2.3 CIM_EnabledLogicalElementCapabilities.MaxElementNameLen

The MaxElementNameLen property shall be implemented when the ElementNameEditSupported property has a value of TRUE.

7.3 Power Supply State Management (Optional)

The power supply state management consists of the CIM_PowerSupply.RequestStateChange() method being supported (see section 8.1) and the value of the CIM_PowerSupply.RequestedState not matching 12 (Not Applicable).

7.3.1 Power Supply State Management Support

When no CIM_EnabledLogicalElementCapabilities instance is associated with the CIM_PowerSupply instance, the power supply state management shall not be supported.

When a CIM_EnabledLogicalElementCapabilities instance is associated with the CIM_PowerSupply instance but the value of the CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported property is an empty array, the power supply state management shall not be supported.

When a CIM_EnabledLogicalElementCapabilities instance is associated with the CIM_PowerSupply instance and the value of the CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported property is not an empty array, the power supply state management shall be supported.

7.4 CIM_PowerSupply.RequestedState

The CIM_PowerSupply.RequestedState property shall have a value of 12 (Not Applicable), 5 (No Change), or a value contained in the CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported property array of the associated CIM_EnabledLogicalElementCapabilities instance (see section 7.2.1).

When the power supply state management is supported and the RequestStateChange() method is successfully executed, the RequestedState property shall be set to the value of the parameter RequestedState of RequestStateChange() method. After the RequestStateChange() method has executed successfully the RequestedState and EnabledState shall have equal values, with the exception of the transitional requested state 11 (Reset). The value of the RequestedState property may also change as a result of a request for a change to the power supply's enabled state by a non-CIM implementation.

7.4.1 RequestedState – 12 (Not Applicable) value

When the power supply state management is not supported, the value of the CIM_PowerSupply.RequestedState property shall be 12 (Not Applicable).

7.4.2 RequestedState – 5 (No Change) value

When the power supply state management is supported, the initial value of the CIM_PowerSupply.RequestedState property shall be 5 (No Change).

7.5 CIM_PowerSupply.EnabledState

Table 2 describes the mapping between the values of the CIM_PowerSupply.EnabledState property and the corresponding description of the state of the power supply. The CIM_PowerSupply.EnabledState property shall match the values that are specified in Table 2. When the RequestStateChange() method executes but does not complete successfully, and the power supply is in an indeterminate state, the CIM_PowerSupply.EnabledState property shall have value of 5 (Not Applicable). The value of this property may also change as a result of a change to the power supply's enabled state by a non-CIM implementation.

Table 2 – EnabledState Value Description

Value	Description	Extended Description
2	Enabled	Power supply shall be enabled.
3	Disabled	Power supply shall be disabled.
5	Not Applicable	Power supply state is indeterminate, or the power supply state management is not supported.
6	Enabled but Offline	Power supply shall be enabled but shall not actively supply power (used in redundant configuration; see section 7.7).

7.6 CIM_SystemDevice and CIM_SuppliesPower

When no instance of CIM_SuppliesPower references the instance of CIM_PowerSupply, the power supply represented by CIM_PowerSupply supplies power to the whole managed system. In this case, the CIM_ComputerSystem instance and the CIM_PowerSupply instance shall only be associated through an instance of CIM_SystemDevice.

When at least one instance of CIM_SuppliesPower references the instance of CIM_PowerSupply, all of the power-receiving elements shall be associated with the CIM_PowerSupply instance through an instance of CIM_SuppliesPower.

7.7 Modeling Power Supply Redundancy (Optional)

Modeling of power supply redundancy is optional. Even when a managed system supports and implements the redundancy, the redundant power supplies may co-exist with non-redundant power supplies. The conditions and requirements in this section refer only to the CIM_PowerSupply instances that represent redundant power supplies.

Power supply redundancy is modeled using CIM_RedundancySet that is associated with the CIM_PowerSupply instances through instances of CIM_MemberOfCollection and CIM_IsSpare.

When power supply redundancy is implemented, at least one instance of CIM_RedundancySet shall exist. The CIM_MemberOfCollection association shall be used to associate the CIM_RedundancySet instance with the CIM_PowerSupply instance. In addition to the CIM_MemberOfCollection association, the CIM_IsSpare association may be used to associate the CIM_RedundancySet instance with the CIM_PowerSupply instance, depending on the type of redundancy implemented (see section 7.7.1).

7.7.1 CIM_RedundancySet.TypeOfSet

When the CIM_RedundancySet.TypeOfSet property contains a value of 3 (Load Balanced), and/or 2 (N+1), or both and does not contain any other values, the CIM_PowerSupply instances that are associated with the CIM_RedundancySet instance shall meet the following requirements:

- The CIM_PowerSupply instances shall be associated with the CIM_RedundancySet instance through an instance of CIM_MemberOfCollection.
- The CIM_PowerSupply instances shall not be associated with the CIM_RedundancySet instance through an instance of CIM_IsSpare.
- The CIM_PowerSupply.EnabledState property shall not have value of 6 (Enabled but Offline).

When the CIM_RedundancySet.TypeOfSet property has a value of 4 (Sparing), 5 (Limited Sparing), or both the Spare Power Supplies may exist. The Spare Power Supply shall be associated with the CIM_RedundancySet instance and shall meet the following requirements:

- The Spare Power Supply shall be associated with the CIM_RedundancySet through instances of both CIM_IsSpare and CIM_MemberOfCollection.
- The Spare Power Supply shall meet one of the following requirements:
 - When the CIM_PowerSupply.EnabledState property has a value of 6 (Enabled but Offline), the SpareStatus property of the referencing CIM_IsSpare instance shall have a value of 2 (Hot Standby).
 - When the CIM_PowerSupply.EnabledState property has a value of 3 (Disabled), the SpareStatus property of the referencing CIM_IsSpare instance shall have a value of 3 (Cold Standby).
 - When the CIM_PowerSupply.EnabledState property has a value other than 3 (Disabled) or 6 (Enabled but Offline), the SpareStatus property of the referencing CIM_IsSpare instance shall have a value of 0 (Unknown).

7.8 CIM_PowerSupply.ElementName

The CIM_PowerSupply.ElementName property shall be formatted as a free-form string of variable length (pattern “.*”).

7.8.1 CIM_PowerSupply.ElementName Is Modifiable

Implementations may allow the CIM_PowerSupply.ElementName to be modified by a client. This behavior is conditional. This section describes the CIM elements and behavior requirements when an implementation supports client modification of the CIM_PowerSupply.ElementName property. CIM_PowerSupply.ElementName property shall be writable when the ElementNameEditSupported property of the associated CIM_EnabledLogicalElementCapabilities instance has a value of TRUE.

7.9 Modeling Real-time Power Measurement Sensor (Optional)

This section describes constraints for representing the real-time power measurement sensor in addition to the constraints described in the Sensors Profile. There are two types of the real-time power measurement sensors: a power consumption measurement sensor and a power production measurement sensor. The following sections describe the requirements for representing such sensors.

7.9.1 Power Consumption Measurement Sensor

The power consumption measurement sensor shall be represented if and only if the underlying device consuming power is represented by an instance of the CIM_ManagedSystemElement subclass. When representing the power consumption measurement sensor, the requirements in this section shall apply.

The discrete power consumption measurement sensor shall be represented by the CIM_Sensor with the property values as defined in section Error!. The analog power consumption measurement sensor shall be represented by the CIM_NumericSensor with the property values as defined in section Error!.

The instance of CIM_Sensor or CIM_NumericSensor representing the power consumption sensor shall be associated to instance of the CIM_ManagedSystemElement subclass representing the managed device consuming the power through the CIM_AssociatedSensor association.

If the power consumption sensor represents the external consumption by all the devices scoped to a managed system, the instance of CIM_Sensor or CIM_NumericSensor representing the sensor shall be associated to the instance of CIM_ComputerSystem representing the managed system through the CIM_AssociatedSensor association.

If the power consumption sensor represents the external consumption by the power supply, the instance of CIM_Sensor or CIM_NumericSensor representing the sensor shall be associated to the Central Instance representing the power supply through the CIM_AssociatedSensor association.

7.9.2 Power Production Measurement Sensor

When representing the power production measurement sensor, the requirements in this section shall apply.

The discrete power production measurement sensor shall be represented by the CIM_Sensor with the property values as defined in section Error!. The analog power production measurement sensor shall be represented by the CIM_NumericSensor with the property values as defined in section Error!.

If the power production sensor represents the power produced by all the power supplies in a managed system, the instance of CIM_Sensor or CIM_NumericSensor representing the sensor shall be associated to the Scoping Instance through the CIM_AssociatedSensor association.

If the power production sensor represents the power produced by the power supply, the instance of CIM_Sensor or CIM_NumericSensor representing the sensor shall be associated to the Central Instance representing the power supply through the CIM_AssociatedSensor association.

7.10 Power Supply Profile Metrics (Optional)

This section describes the Power Supply Profile metrics. The constraints in this section are in addition to the ones defined in DSP1053.

The CIM_BaseMetricDefinition.Name property shall have the value specified in the column “Name”, and shall meet the requirements for one of the metrics type mentioned in the corresponding column “Supported Metrics” per DSP1053 if the metric matches the description in the column “Description”.

Table 3 – Power Supply Profile Metrics – Dell Specific

Name	Supported Metrics Type	Description
Dell:System Power Consumption	Simple, Aggregation	Dell metric describing instantaneous power consumption of a system including the historic trending data, high and low watermarks.
Dell:System Power Production	Simple, Aggregation	Dell metric describing the power produced by a system by all its power production components, such as power supplies, and includes the historic trending data, and high and low watermarks.
Dell:System Aggregate Power Consumption	Summation	Dell metric describing accumulative power consumption of a system including its components supplied externally (KW*hr).
Dell:Power Source Power Consumption	Simple, Aggregation	Dell metric describing external consumption of power source such as power supply or power converter.
Dell:Power Source Power Production	Simple, Aggregation	Dell metric describing power produced by a power source, such as a power supply or a power converter.
Dell:Component Power Consumption	Simple, Aggregation	Dell metric describing the power consumption by a specific component.
Dell:Generic Power Consumption	Simple, Aggregation,Summation	Dell generic metric that describes power consumption by a single of a group of managed elements that could include a mix of power sources and consuming components.
Dell:Generic Power Production	Simple, Aggregation,Summation	Dell generic metric that describes power production by a single of a group of managed elements that could include a mix of power sources and consuming components.

8 Methods

This section details the requirements for supporting intrinsic operations and extrinsic methods for the CIM elements defined by this profile.

8.1 Method: CIM_PowerSupply.RequestStateChange()

Invocation of the CIM_PowerSupply.RequestStateChange() method will change the element's state to the value that is specified in the RequestedState parameter.

Return values for RequestStateChange() shall be as specified in Table 4 where the method-execution behavior matches the return-code description. RequestStateChange() method's parameters are specified in Table 5.

When the power supply state management is supported, the RequestStateChange() method shall be implemented and shall not return a value of 1 (Not Supported) (see section 7.3.1).

When the value of the RequestedState parameter is 6 (Offline) and the power supply is not a Spare Power Supply, the RequestStateChange() method shall return a value of 2 (Error Occurred).

Invoking the CIM_PowerSupply.RequestStateChange() method multiple times could result in earlier requests being overwritten or lost.

No standard messages are defined for this method.

Table 4 – CIM_PowerSupply.RequestStateChange() Method: Return Code Values

Value	Description
0	Request was successfully executed.
1	Method is not supported in the implementation.
2	Error occurred
4096	Job started

Table 5 – CIM_PowerSupply.RequestStateChange() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	RequestedState	uint16	Valid state values: 2 (Enabled) 3 (Disabled) (see section 8.1.1) 6 (Offline) (see section 8.1.1) 11 (Reset)
OUT	Job	CIM_ConcreteJob REF	Returned if job started
IN, REQ	TimeoutPeriod	Datetime	Client specified maximum amount of time the transition to a new state is supposed to take: 0 or NULL – No time requirements <interval> – Maximum time allowed

8.1.1 RequestStateChange() for the Spare Power Supply

After the successful execution of the RequestStateChange() method on the Spare Power Supply with the RequestedState parameter set to 6 (Offline), the SpareStatus of the referenced CIM_IsSpare association shall have value of 2 (Hot Standby).

After the successful execution of the RequestStateChange() method on the Spare Power Supply with the RequestedState parameter set to 3 (Disabled), the SpareStatus of the referenced CIM_IsSpare association shall have value of 3 (Cold Standby).

8.2 Method: CIM_RedundancySet.Failover()

The CIM_RedundancySet.Failover() method forces a failover from one member of a CIM_RedundancySet collection to another. When the method executes successfully, the power supply that is represented by the CIM_PowerSupply instance referenced by the FailoverFrom parameter will become inactive. The power supply that is represented by the CIM_PowerSupply instance referenced by the FailoverTo parameter will take over as the active power supply.

The Failover() method may be supported if the FailoverSupported property of at least one instance of CIM_IsSpare that references the CIM_RedundancySet has a value of 3 (Manual) or 4 (Both Manual and Automatic).

The Failover() method shall not be supported if the FailoverSupported property of every instance of CIM_IsSpare that references the CIM_RedundancySet has a value of 2 (Automatic).

The execution of the Failover() method shall return a value of 2 (Error Occurred) under the following conditions:

- The CIM_PowerSupply instance that is referenced by the FailoverTo parameter is not a Spare Power Supply.
- The CIM_PowerSupply instance that is referenced by the FailoverFrom parameter is not associated with the CIM_RedundancySet instance only through the CIM_MemberOfCollection association.

After the Failover() method executes successfully:

- The CIM_PowerSupply instance that is referenced by the FailoverTo parameter shall take over as the active power supply. The CIM_PowerSupply instance that is referenced by the FailoverTo parameter shall be associated with the CIM_RedundancySet only through the CIM_MemberOfCollection association.
- The CIM_PowerSupply instance that is referenced by FailoverFrom parameter shall become a Spare Power Supply.
- When the power supply state management is supported, the EnabledState property of the CIM_PowerSupply instance that is referenced by the FailoverFrom parameter shall not have a value of 2 (Enabled), but may have a value of 6 (Enabled but Offline).

CIM_RedundancySet.Failover() return values shall be as specified in Table 6.

CIM_RedundancySet.Failover() parameters are specified in Table 7.

No standard messages are defined for this method.

Table 6 – CIM_RedundancySet.Failover() Method: Return Code Values

Value	Description
0	Request was successfully executed.
1	Method is not supported in the implementation.
2	Error occurred

Table 7 – CIM_RedundancySet.Failover() Method: Parameters

Qualifiers	Name	Type	Description/Values
IN, REQ	FailoverFrom	CIM_ManagedElement REF	The redundant element that will become inactive
IN, REQ	FailoverTo	CIM_ManagedElement REF	The redundant element that will become active and take over the inactivated element

8.3 Profile Conventions for Operations

Support for operations for each profile class (including associations) is specified in the following subclauses. Each subclause includes either the statement “All operations in the default list in section 8.3 are supported as described by DSP0200 version 1.2” or a table listing all of the operations that are not supported by this profile or where the profile requires behavior other than that described by DSP0200.

The default list of operations is as follows:

- GetInstance
- EnumerateInstances
- EnumerateInstanceNames
- Associators
- AssociatorNames
- References
- ReferenceNames

A compliant implementation shall support all of the operations in the default list for each class, unless the “Requirement” column states something other than *Mandatory*.

8.4 CIM_ElementCapabilities Operations

Table 8 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 8 – CIM_ElementCapabilities Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

8.5 CIM_EnabledLogicalElementCapabilities Operations

All operations in the default list in section 8.3 are supported as described by DSP0200 version 1.2.

8.6 CIM_IsSpare Operations

Table 9 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 9 – CIM_IsSpare Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

8.7 CIM_MemberOfCollection Operations

Table 10 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 10 – CIM_MemberOfCollection Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

8.8 CIM_OwningCollectionElement Operations

Table 11 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 11 – CIM_OwningCollectionElement Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

8.9 CIM_PowerSupply Operations

Table 12 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 12 – CIM_PowerSupply Operations

Operation	Requirement	Messages
ModifyInstance	Optional. See section 8.9.1.	None

8.9.1 CIM_PowerSupply—ModifyInstance

This section details the requirements for the ModifyInstance operation applied to an instance of CIM_PowerSupply. The ModifyInstance operation may be supported.

The ModifyInstance operation shall be supported and CIM_PowerSupply.ElementName shall be modifiable when the ElementNameEditSupported property of the CIM_EnabledLogicalElementCapabilities instance that is associated with the CIM_PowerSupply instance has a value of TRUE. See section 8.9.1.1.

8.9.1.1 CIM_PowerSupply.ElementName

When the ElementNameEditSupported property of the CIM_EnabledLogicalElementCapabilities instance that is associated with the CIM_PowerSupply instance has a value of TRUE, the implementation shall allow the ModifyInstance operation to change the value of the ElementName property of the CIM_PowerSupply instance. The ModifyInstance operation shall enforce the length restriction specified in the MaxElementNameLen property of the CIM_EnabledLogicalElementCapabilities instance.

When the ElementNameEditSupported property of the CIM_EnabledLogicalElementCapabilities instance has a value of FALSE, the implementation shall not allow the ModifyInstance operation to change the value of the ElementName property of the CIM_PowerSupply instance.

8.10 CIM_RedundancySet Operations

All operations in the default list in section 8.3 are supported as described by DSP0200 version 1.2.

8.11 CIM_SuppliesPower Operations

Table 13 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 13 – CIM_SuppliesPower Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

8.12 CIM_SystemDevice Operations

Table 14 lists operations that either have special requirements beyond those from DSP0200, or shall not be supported.

Table 14 – CIM_SystemDevice Operations

Operation	Requirement	Messages
EnumerateInstances	Unspecified	None
EnumerateInstanceNames	Unspecified	None
Associators	Unspecified	None
AssociatorNames	Unspecified	None
References	Unspecified	None
ReferenceNames	Unspecified	None

9 Use Cases

This section contains object diagrams and use cases for the Power Supply Profile.

9.1 Object Diagrams

Figure 2 represents a possible instantiation of the Power Supply Profile. In this instantiation, the managed system, system1, has a power supply, pwrsupply1. The power supply is operating, but in a degraded state and pwrsupply1 produces 4000 milliwatts of power. pwrsupply1's physical package information is represented as well.

Because pwrsupply1 does not have the CIM_SuppliesPower association reference, pwrsupply1 is supplying power to system1, which is denoted by the CIM_SystemDevice association. system1 is also the scoping instance for pwrsupply1. Following the CIM_ElementConformsToProfile association to profile1, and then the referenced CIM_ReferencedProfile association to a CIM_RegisteredProfile instance with the RegisteredName property set to "Power Supply Profile", the client can retrieve profile2. profile2 will show the version of the current Power Supply Profile implementation.

For simplicity, the prefix CIM_ has been removed from the names of the classes in the figure.

Power Supply Profile

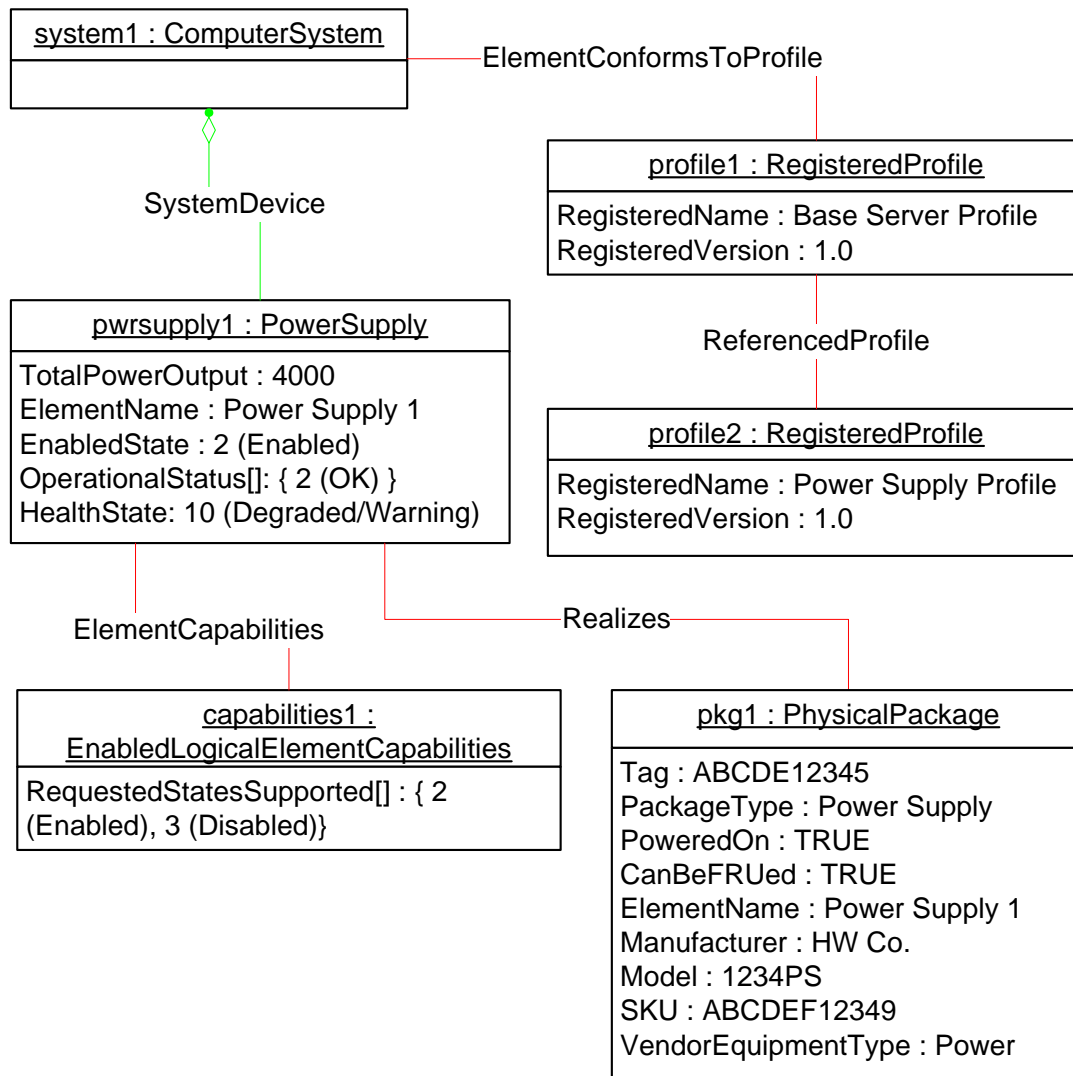


Figure 2 – Power Supply Profile: Object Diagram

Figure 3 represents a possible instantiation of the Power Supply Profile with redundancy. system1 has spare power supply redundancy. Because pwrsupply1 is associated with redundancysset1 through the CIM_IsSpare association, and the value of the pwrsupply1's EnabledState property is 6 (Enabled but Offline), the pwrsupply1 is a Spare Power Supply that is enabled, but is not actively providing power to system1. pwrsupply2 is the active power supply of system1, because the value of its EnabledState property is 2 (Enabled) and pwrsupply2 is associated with redundancysset1 only through the CIM_MemberOfCollection association.

If redundancysset1 supports the Failover() method, a client can execute the Failover() method with the FailoverFrom parameter referencing pwrsupply2, and the FailoverTo parameter referencing pwrsupply1.

When the Failover() method executes successfully, pwrsupply1 will be the active power supply for system1 with an EnabledState property value of 2 (Enabled) and will not be associated with redundancysset1 through the CIM_IsSpare association. Additionally, pwrsupply2 will not have an EnabledState property value of 2 (Enabled), and will be associated to redundancysset1 through the CIM_IsSpare association. Because pwrsupply1 and pwrsupply2 do not have the CIM_SuppliesPower association reference, both are supplying power to system1, which is denoted by the CIM_SystemDevice association.

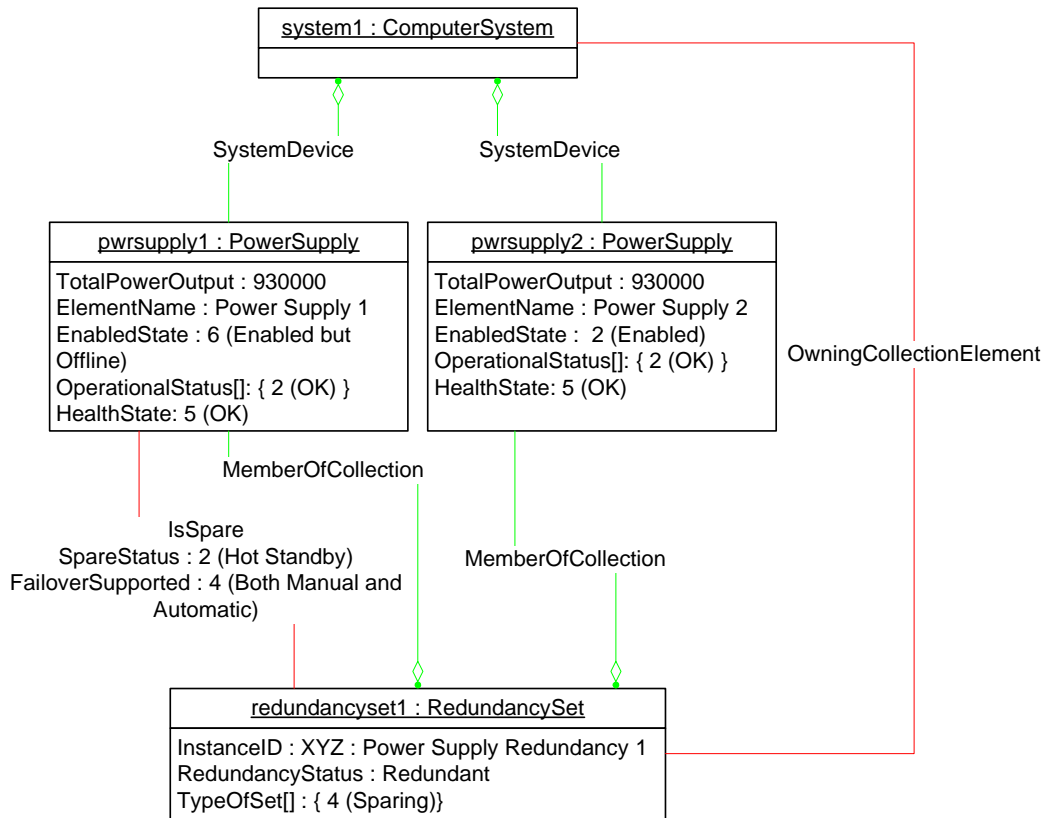


Figure 3 – Power Supply Profile: Redundancy Object Diagram

Figure 4 shows a possible instantiation of the Power Supply Profile in which the power supply is dedicated to supply power to a particular managed element. In this diagram, pwrsupply1 is associated to blade2 through the CIM_SuppliesPower association. This association denotes that pwrsupply1 supplies power only to blade2 and does not supply power to modular1 and blade1. In this case, the CIM_SystemDevice association does not reference the element to which pwrsupply1 supplies power.

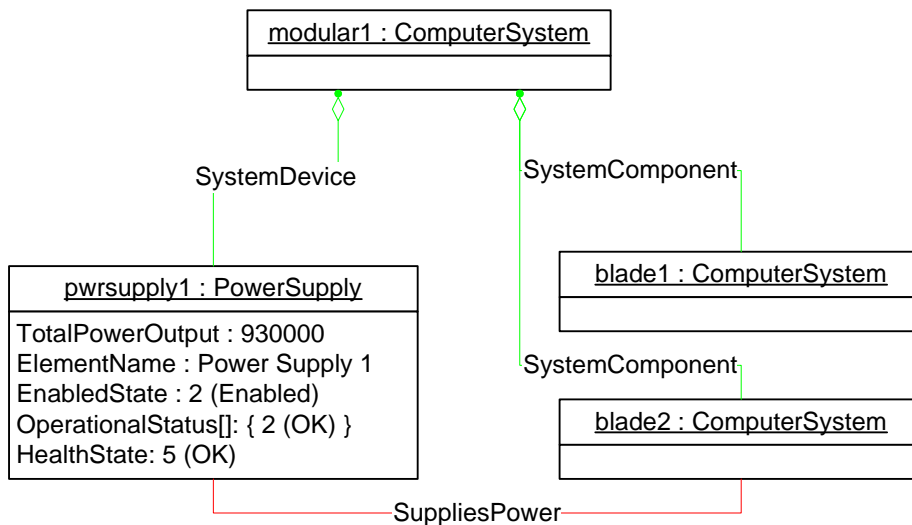


Figure 4 – Power Supply Profile: Dedicated Power Supply

9.2 Power Sensor Information

Figure 5 shows a possible instantiation of the Power Supply Profile including the power measuring sensors. Numsensor1, represents the numeric reading of Watts for the total power produced by all the power supplies of system1, pwrsupply1 and pwrsupply2. Each individual power supplies' supplied power is represented by sensors numsensor3 and numsensor4. Numsensor2 represents the total power consumed by all the power consuming devices of system1

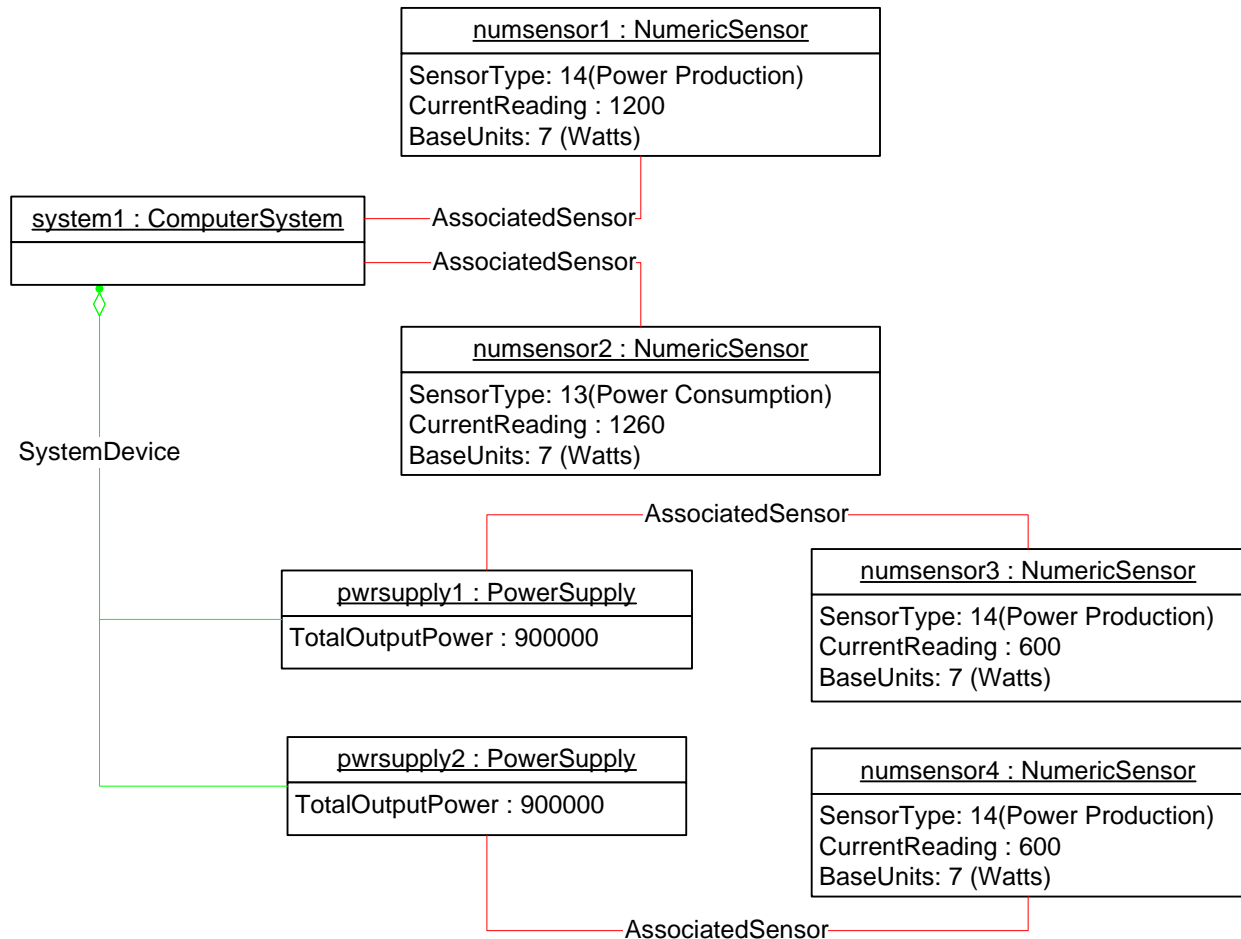


Figure 5 – Power Supply Profile: Power Sensors

9.3 Power Metrics

Figure 6 shows a possible instantiation of the Power Supply Profile including the power metrics. The metval1 through metval200 are values collected for interval metrics, bmd1, that represents the external power consumption of system1. Amd1 represents the high watermark for the bmd1 metrics, the high watermark of the system1 external power consumption. Psbmd1 is the interval metrics measuring the power production by pwrsupply1.

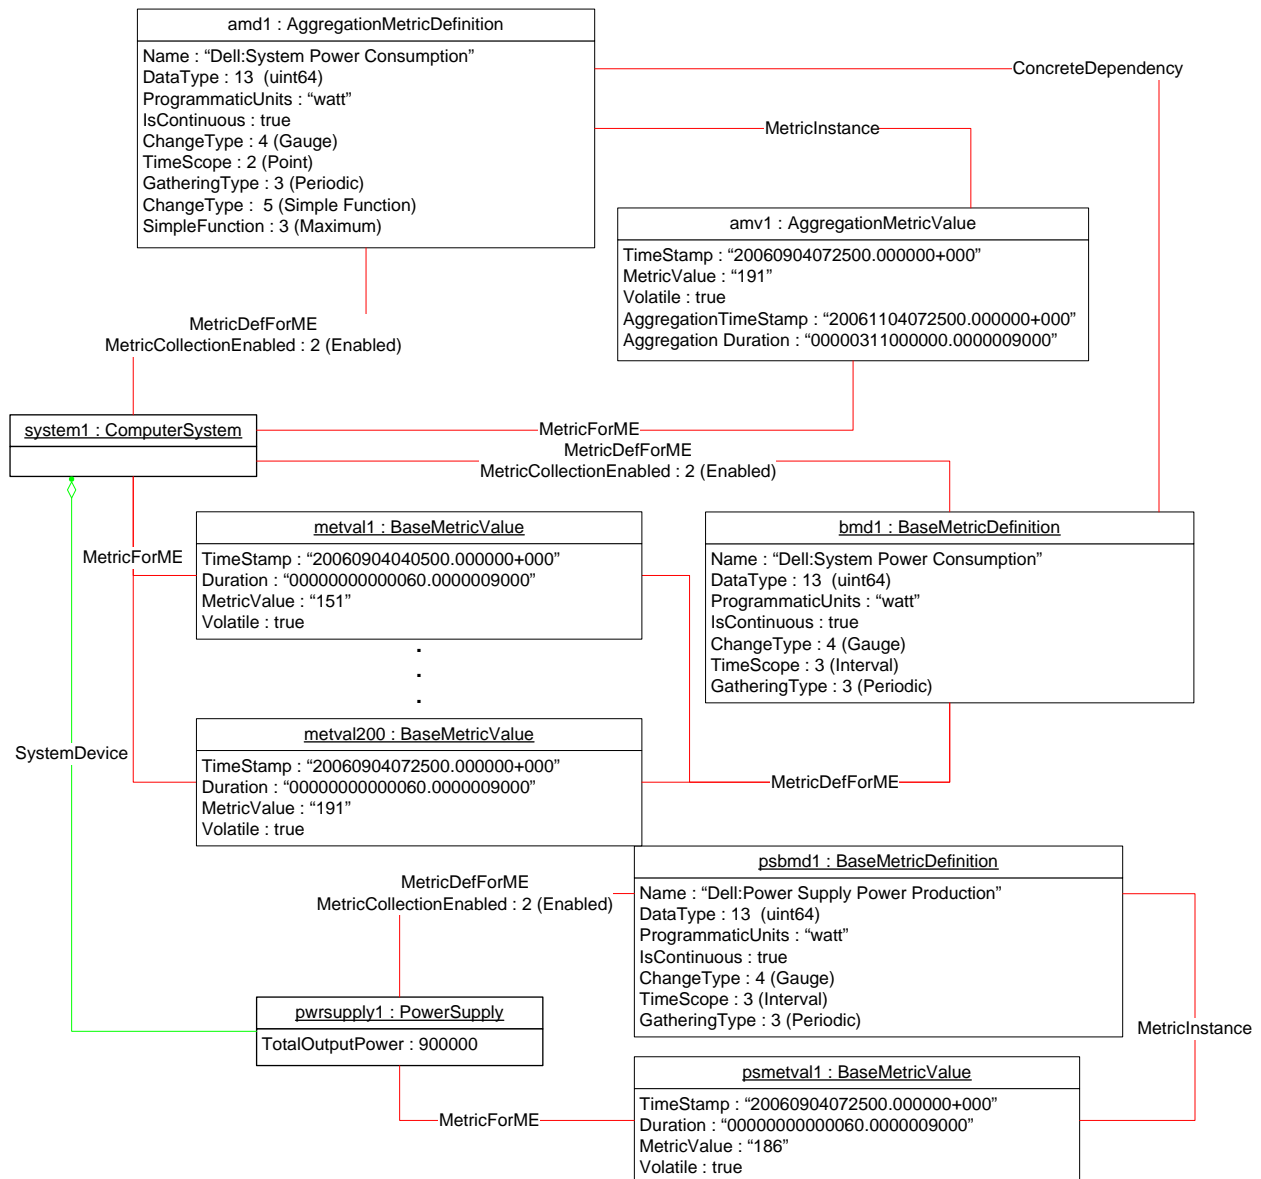


Figure 6 – Power Supply Profile: Power Metrics

9.4 Retrieve the Power Supply’s Power Output Information

A client can determine the power output information for a given instance of CIM_PowerSupply by retrieving the TotalPowerOutput property.

9.5 Reset the Power Supply

A client can reset the power supply as follows:

- 1) For the given instance of CIM_PowerSupply, find the associated instance of CIM_EnabledLogicalElementCapabilities.
- 2) If the CIM_EnabledLogicalElementCapabilities.RequestedStatesSupported property is a non-empty array that contains the value 11 (Reset), execute the RequestStateChange() method

with the value of the RequestedState parameter set to 11 (Reset) that will disable and then enable the power supply represented by this instance.

9.6 Retrieve the Power Supply Redundancy Status

A client can determine the redundancy status for a given instance of CIM_PowerSupply as follows:

- 1) Find the instance of CIM_RedundancySet that is associated with the instance of CIM_PowerSupply through an instance of CIM_MemberOfCollection.
- 2) Retrieve the value of the CIM_RedundancySet.RedundancyStatus property.

9.7 Find the Elements to Which the Power Supply Supplies Power

A client can determine the elements that a given instance of CIM_PowerSupply supplies power as follows:

- 1) Find all of the CIM_SuppliesPower association instances that reference the given instance of CIM_PowerSupply.
- 2) If the CIM_SuppliesPower association instances exist, the CIM_SuppliesPower.Dependent properties will reference all the instances of the subclass of CIM_ManagedSystemElement that receive power from the power supply.
- 3) If no CIM_SuppliesPower association instances exist, select the CIM_ComputerSystem instance associated with the given instance of the CIM_PowerSupply instance through the CIM_SystemDevice association.

9.8 Determine Whether the CIM_PowerSupply.ElementName Is Modifiable

A client can determine whether it can modify the CIM_PowerSupply.ElementName property as follows:

- 1) Find the CIM_EnabledLogicalElementCapabilities instance that is associated with the CIM_PowerSupply instance.
- 2) Query the value of the ElementNameEditSupported property of the instance. If the value is TRUE, the client can modify the CIM_PowerSupply.ElementName property.

10 CIM Elements

Table 15 shows the instances of CIM Elements for this profile. Instances of the CIM Elements shall be implemented as described in Table 15. Sections 7 (“Implementation Requirements”) and 8 (“Methods”) may impose additional requirements on these elements.

Table 15 – CIM Elements: Power Supply Profile

Element Name	Requirement	Description
Classes		
CIM_BaseMetricDefinition	Optional	See section 10.1
CIM_ElementCapabilities	Conditional	See section 10.2.
CIM_EnabledLogicalElementCapabilities	Optional	See sections 7.2 and 10.3.
CIM_IsSpare	Optional	See section 10.4.
CIM_MemberOfCollection	Conditional	See section 10.5.
CIM_NumericSensor	Optional	See section 10.6 and 10.7
CIM_OwningCollectionElement	Conditional	See section 10.14.
CIM_PowerSupply	Mandatory	See sections 7.1 and 10.8.
CIM_RedundancySet	Optional	See sections 7.7 and 10.9.
CIM_RegisteredProfile	Mandatory	See section 10.10.
CIM_Sensor	Optional	See section 10.11 and 10.12
CIM_SuppliesPower	Optional	See sections 7.6 and 10.15.
CIM_SystemDevice	Mandatory	See sections 7.6 and 10.11.
Indications		
None defined in this profile		

10.1 CIM_BaseMetricDefinition

The CIM_Sensor class is defined by the Sensors Profile. The requirements listed in Table 26 are in addition to those mandated by the Sensors Profile.

Table 16 – Class: CIM_BaseMetricDefinition

Properties	Requirement	Description
Name	Mandatory	See section 7.10.

10.2 CIM_ElementCapabilities

CIM_ElementCapabilities is used to associate an instance of CIM_PowerSupply with an instance of CIM_EnabledLogicalElementCapabilities that describes the capabilities of the CIM_PowerSupply instance. CIM_ElementCapabilities is mandatory when the CIM_EnabledLogicalElementCapabilities instance is instantiated.

Table 17 – CIM_ElementCapabilities

Properties	Requirement	Notes
ManagedElement	Mandatory	Key: Shall reference the instance of CIM_PowerSupply Cardinality 1..* indicating one or more references
Capabilities	Mandatory	Key: Shall reference the instance of CIM_EnabledLogicalElementCapabilities Cardinality 0..1 indicating zero or one reference

10.3 CIM_EnabledLogicalElementCapabilities

CIM_EnabledLogicalElementCapabilities represents the capabilities of the power supply.

Table 18 – CIM_EnabledLogicalElementCapabilities

Properties	Requirement	Notes
InstanceID	Mandatory	Key
RequestedStatesSupported	Mandatory	See section 7.2.1.
ElementNameEditSupported	Mandatory	See section 7.2.2.
MaxElementNameLen	Conditional	See section 7.2.3.

10.4 CIM_IsSpare

CIM_IsSpare is used to associate an instance of CIM_PowerSupply with the instance of CIM_RedundancySet that the CIM_PowerSupply instance is a member and is a Spare Power Supply.

Table 19 – Class: CIM_IsSpare

Properties	Notes	Description
Antecedent	Mandatory	Key: Shall reference the CIM_RedundancySet instance of which the CIM_PowerSupply instance is a member and where the CIM_PowerSupply instance is a spare Cardinality 0..1 indicating zero or one reference
Dependent	Mandatory	Key: Shall reference the CIM_PowerSupply instance Cardinality 1..* indicating one or more references
SpareStatus	Mandatory	
FailoverSupported	Mandatory	

10.5 CIM_MemberOfCollection

CIM_MemberOfCollection is used to associate an instance of CIM_PowerSupply with the instance of CIM_RedundancySet that the CIM_PowerSupply is a member. CIM_MemberOfCollection is mandatory when CIM_RedundancySet is instantiated.

Table 20 – Class: CIM_MemberOfCollection

Properties	Requirement	Description
Collection	Mandatory	Key: Shall reference the CIM_RedundancySet instance of which the CIM_PowerSupply instance is a member. Cardinality 0..1 indicating zero or one reference
Member	Mandatory	Key: Shall reference the CIM_PowerSupply instance Cardinality 1..* indicating one or many references

10.6 CIM_NumericSensor – Power Consumption Measurement Sensor

The CIM_NumericSensor class is defined by the Sensors Profile. The requirements listed in Table 21 are in addition to those mandated by the Sensors Profile.

Table 21 – Class: CIM_NumericSensor

Properties	Requirement	Description
SensorType	Mandatory	SensorType shall be set to 13 (Power Consumption).

10.7 CIM_NumericSensor – Power Production Measurement Sensor

The CIM_NumericSensor class is defined by the Sensors Profile. The requirements listed in Table 21 are in addition to those mandated by the Sensors Profile.

Table 22 – Class: CIM_NumericSensor

Properties	Requirement	Description
SensorType	Mandatory	SensorType shall be set to 14 (Power Production).

10.8 CIM_PowerSupply

CIM_PowerSupply is used to represent the power supply.

Table 23 – Class: CIM_PowerSupply

Properties and Methods	Requirement	Description
SystemCreationClassName	Mandatory	Key
SystemName	Mandatory	Key
CreationClassName	Mandatory	Key
DeviceID	Mandatory	Key
TotalOutputPower	Mandatory	Shall match 0 when the power supply's total output power is unknown
ElementName	Mandatory	See section 7.8.
OperationalStatus	Mandatory	
HealthState	Mandatory	
EnabledState	Mandatory	See section 7.5.
RequestedState	Mandatory	See section 7.4.
RequestStateChange()	Conditional	See section 8.1.

10.9 CIM_RedundancySet

CIM_RedundancySet is used to represent the aggregation of redundant power supplies.

Table 24 – Class: CIM_RedundancySet

Properties and Methods	Requirement	Description
InstanceID	Mandatory	Key
RedundancyStatus	Mandatory	
TypeOfSet	Mandatory	See section 7.7.1.
MinNumberNeeded	Mandatory	Shall match 0 when the minimum number of power supplies needed for the redundancy is unknown
ElementName	Mandatory	Shall be formatted as a free-form string of variable length (pattern ".*")
Failover()	Optional	See section 8.1.1.

10.10 CIM_RegisteredProfile

The CIM_RegisteredProfile class is defined by the Profile Registration Profile. The requirements listed in Table 25 are in addition to those mandated by the Profile Registration Profile.

Table 25 – Class: CIM_RegisteredProfile

Properties	Requirement	Description
RegisteredName	Mandatory	This property shall have a value of "Power Supply Profile".
RegisteredVersion	Mandatory	This property shall have a value of "1.0.0".
RegisteredOrganization	Mandatory	This property shall have a value of 1 (Other).
OtherRegisteredOrganization	Mandatory	This property shall match "Dell Inc."

10.11 CIM_Sensor – Power Consumption Measurement Sensor

The CIM_Sensor class is defined by the Sensors Profile. The requirements listed in Table 26 are in addition to those mandated by the Sensors Profile.

Table 26 – Class: CIM_Sensor

Properties	Requirement	Description
SensorType	Mandatory	SensorType shall be set to 13 (Power Consumption).

10.12 CIM_Sensor – Power Production Measurement Sensor

The CIM_Sensor class is defined by the Sensors Profile. The requirements listed in Table 26 are in addition to those mandated by the Sensors Profile.

Table 27 – Class: CIM_Sensor

Properties	Requirement	Description
SensorType	Mandatory	SensorType shall be set to 14 (Power Production).

10.13 CIM_SystemDevice

CIM_SystemDevice is used to associate an instance of CIM_PowerSupply with the instance of CIM_ComputerSystem of which the CIM_PowerSupply instance is a member.

Table 28 – Class: CIM_SystemDevice

Properties	Requirement	Description
GroupComponent	Mandatory	Key: Shall reference the CIM_ComputerSystem instance of which the CIM_PowerSupply instance is a member Cardinality 1 indicating one reference
PartComponent	Mandatory	Key: Shall reference the CIM_PowerSupply instance Cardinality 1..* indicating one or more references

10.14 CIM_OwningCollectionElement

CIM_OwningCollectionElement is used to associate an instance of CIM_RedundancySet with the instance of CIM_ComputerSystem that the CIM_RedundancySet instance is a member. The instance of CIM_OwningCollectionElement is conditional on the instantiation of the CIM_RedundancySet class.

Table 29 – Class: CIM_OwningCollectionElement

Properties	Requirement	Description
OwningElement	Mandatory	Key: Shall reference the CIM_ComputerSystem instance of which the CIM_RedundancySet instance is a member Cardinality 1 indicating one reference
OwnedElement	Mandatory	Key: Shall reference the CIM_RedundancySet instance Cardinality * indicating zero or more references

10.15 CIM_SuppliesPower

CIM_SuppliesPower is used to associate an instance of CIM_PowerSupply with the instance of CIM_ManagedSystemElement that the power supply represented by the CIM_PowerSupply instance supplies power. See section 7.6.

Table 30 – Class: CIM_SuppliesPower

Properties	Requirement	Description
Antecedent	Mandatory	Key: Shall reference the CIM_PowerSupply instance Cardinality 1..* indicating one or more references
Dependent	Mandatory	Key: Shall reference the instance of the subclass of CIM_ManagedSystemElement that represents the element receiving the power Cardinality * indicating zero or more references

ANNEX A
(informative)

Change Log

Version	Date	Description
1.0.0a	05/07/2007	Specification is Preliminary Approved.

ANNEX B (informative)

Acknowledgments

The authors wish to acknowledge the following people.

Editor:

- Khachatur Papanyan – Dell Inc.

Contributors:

- Jon Hass – Dell Inc.
- Khachatur Papanyan – Dell Inc.
- Michael Brundridge – Dell Inc.